




RS-tiivisteiden asennusohjeet

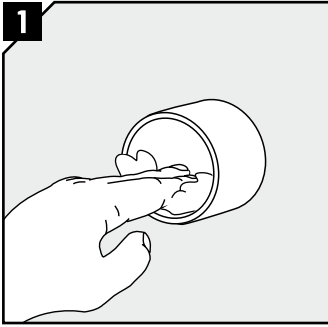


1 Poista epäpuhtaudet holkista / aukosta.

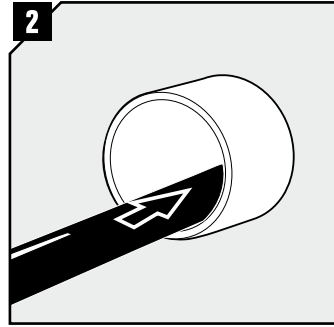


2 Vedä kaapeli tai putki aukosta läpi.

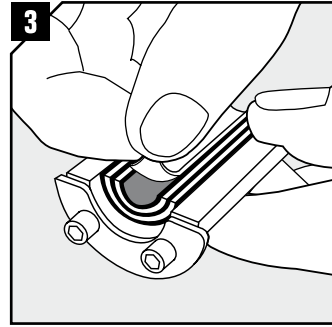


3 Sovita tiiviste kaapelille tai putkelle sopivaksi kuorimalla puoliskoista tarvittava määrä kerroksia pois, kunnes saavutat kuvassa 4 näkyvän raon.

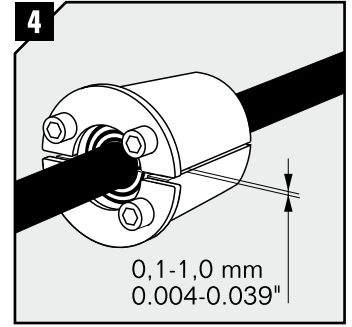


4 Varmista, että tiivisteiden kahden puoliskon väliin jää 0,1-1mm rako, kun puoliskot on sovitettu kaapelin tai putken ympärille.

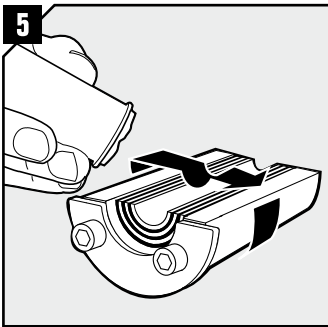

5 Käytä Roxtec Rasvaa tiivisteiden puoliskojen rasvaamiseen: rasvaa tiivisteiden sisäpinta kunnolla, ulkopinta vain kevyesti.

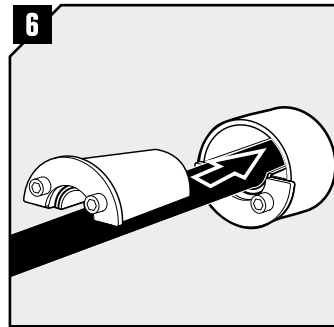

6 Aseta puoliskot yksitellen holkin sisälle.

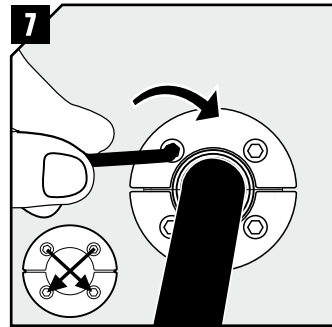

7 Kiristä ruuvit ristikkäin. Tiiviste puristuu holkkiin tiiviiksi läpivienniksi. Tarkista maksimivääntömomentti oikeasta taulukosta.

Koko:	Suosittelava maksimivääntömomentti* (Nm)
RS	
23 - 31	1
43 - 100	4
125 - 200	7
225 - 400	17
450 - 644	35

*Suositeltu maksimivääntömomentti riippuu eri tekijöistä, mm. kaapelin tai putken koosta, käytetyn rasvan määrästä, holkin koosta, kaapelivaipan materiaalista, jne.

RS-tiivisteiden avaaminen

Toista vaiheet päinvastaiseen suuntaan.

Huom

- Täydellisen tiiveyden saavuttamiseksi odota 24 tuntia tai enemmän asennuksen jälkeen, ennen kuin kaapelit tai putket altistetaan jännitykselle tai paineelle.
- Kaapelien tai putkien tulee mennä kohtisuorassa aukosta / holkista läpi.
- Huomattavan painavat kaapelit tai putket on kannakoitava ja tuettava ympäröivään rakenteeseen, jotta vältetään tiivisteiden mahdollinen vaurioituminen sekä vähennetään tiivisteeseen kohdistuvaa painetta.

DISCLAIMER

"The Roxtec cable entry sealing system ("the Roxtec system") is a modular-based system of sealing products consisting of different components. Each and every one of the components are necessary for the best performance of the Roxtec system. The Roxtec system has been certified to resist a number of different hazards. Any such certification, and the ability of the Roxtec system to resist such hazards, is dependent on all components that are installed as a part of the Roxtec system. Thus, the certification is not valid and does not apply unless all components installed as part of the Roxtec system are manufactured by or under license from Roxtec ("authorized manufacturer"). Roxtec gives no performance guarantee with respect to the Roxtec system, unless (i) all components installed as part of the Roxtec system is manufactured by an authorized manufacturer and (ii) the purchaser is in compliance with (a), and (b), below.

(a) During storage, the Roxtec system or part thereof, shall be kept indoors in its original packaging at a temperature not exceeding +70°C/+158°F and not below -40°C/-40°F.

(b) Installation shall be carried out in accordance with Roxtec

installation instructions in effect from time to time.

The product information provided by Roxtec does not release the purchaser of the Roxtec system, or part thereof, from the obligation to independently determine the suitability of the products for the intended process, installation and/or use.


Roxtec gives no guarantee for the Roxtec system or any part thereof and assumes no liability for any loss or damage whatsoever, whether direct, indirect, consequential, loss of profit or otherwise, occurred or caused by the Roxtec systems or installations containing components not manufactured by an authorized manufacturer.

Roxtec expressly excludes any implied warranties of merchantability and fitness for a particular purpose and all other express or implied representations and warranties provided by statute or common law. User determines suitability of the Roxtec system for intended use and assumes all risk and liability in connection therewith. In no event shall Roxtec be liable for consequential, punitive, special, exemplary or incidental damages."




Roxtec Finland Oy
Kutomotie 6B, 00380 Helsinki, FINLAND
PHONE +358 9 565 5090, FAX +358 9 565 50955
EMAIL info@fi.roxtec.com


Roxtec International AB
Box 540, 371 23 Karlskrona, SWEDEN
PHONE +46 455 36 67 00, FAX +46 455 820 12
EMAIL info@roxtec.com, www.roxtec.com

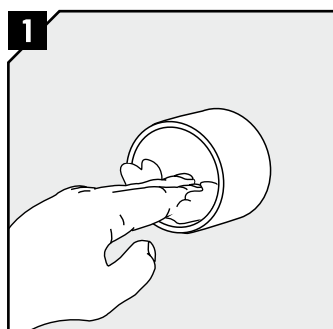


1 Avlägsna smuts från hylsan/hålet.

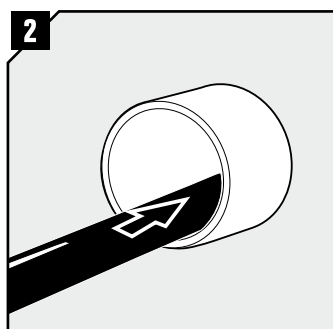


2 Dra kabeln eller röret igenom hylsan/hålet.

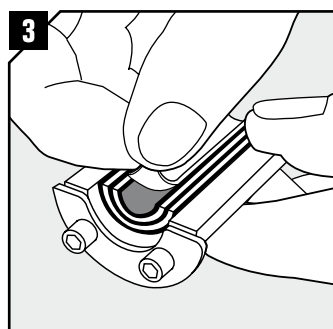


3 Anpassa tätningen till kabeln eller röret genom att dra bort skikt så att passningen blir enligt bild 4.

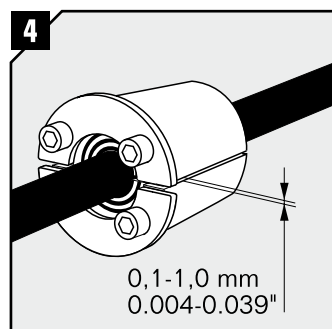


4 Sträva efter att få ett gap på 0.1-1.0mm mellan de två halvorna när de hålls mot kabeln/röret.
0,1-1,0 mm
0.004-0.039"

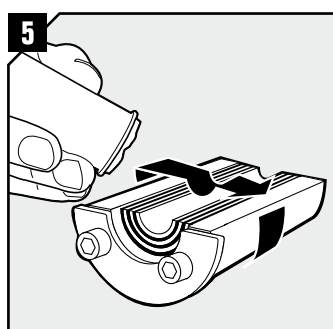

5 Använd Roxtec Smörjmedel för att smörja halvorna: smörj tätningens utsida lätt och insidan rikligt.

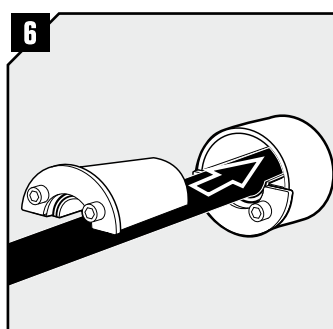

6 För in halvorna en i taget i hylsan/hålet.

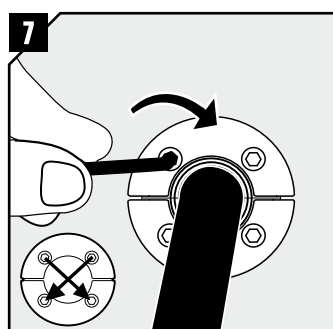

7 Dra åt skruvarna växelvis. Tätningen kommer att spännas och täta genomföringen.

Storlek: RS	Rekommenderat max vridmoment* (Nm)
23 - 31	1
43 - 100	4
125 - 200	7
225 - 400	17
450 - 644	35

* Rekommenderat vridmoment beror på många faktorer, t.ex. kabelns eller rörets storlek, använd mängd smörjmedel, hylsans storlek, kabelns material, osv.

Öppning av RS-tätningen

Repetera stegen i omvänd ordning.

OBS

- För bästa prestanda vänta 24 timmar eller längre efter installation innan kabeln eller röret utsätts för tryck eller spänning.
- Kablar och rör skall dras vinkelrätt genom ramen.
- Kabel/rör med betydande vikt måste avlastas av omgivande struktur eller utrustning för att förhindra skador eller sättningar i tätningen.

DISCLAIMER

"The Roxtec cable entry sealing system ("the Roxtec system") is a modular-based system of sealing products consisting of different components. Each and every one of the components are necessary for the best performance of the Roxtec system. The Roxtec system has been certified to resist a number of different hazards. Any such certification, and the ability of the Roxtec system to resist such hazards, is dependent on all components that are installed as a part of the Roxtec system. Thus, the certification is not valid and does not apply unless all components installed as part of the Roxtec system are manufactured by or under license from Roxtec ("authorized manufacturer"). Roxtec gives no performance guarantee with respect to the Roxtec system, unless (I) all components installed as part of the Roxtec system is manufactured by an authorized manufacturer and (II) the purchaser is in compliance with (a), and (b), below.

(a) During storage, the Roxtec system or part thereof, shall be kept indoors in its original packaging at a temperature not exceeding +70°C/+158°F and not below -40°C/-40°F.

(b) Installation shall be carried out in accordance with Roxtec

installation instructions in effect from time to time.

The product information provided by Roxtec does not release the purchaser of the Roxtec system, or part thereof, from the obligation to independently determine the suitability of the products for the intended process, installation and/or use.

Roxtec gives no guarantee for the Roxtec system or any part thereof and assumes no liability for any loss or damage whatsoever, whether direct, indirect, consequential, loss of profit or otherwise, occurred or caused by the Roxtec systems or installations containing components not manufactured by an authorized manufacturer.

Roxtec expressly excludes any implied warranties of merchantability and fitness for a particular purpose and all other express or implied representations and warranties provided by statute or common law. User determines suitability of the Roxtec system for intended use and assumes all risk and liability in connection therewith. In no event shall Roxtec be liable for consequential, punitive, special, exemplary or incidental damages."



Roxtec Finland Oy
Kutomotie 6B, 00380 Helsinki, FINLAND
PHONE +358 9 565 5090, FAX +358 9 565 50955
EMAIL info@fi.roxtec.com

Roxtec International AB
Box 540, 371 23 Karlskrona, SWEDEN
PHONE +46 455 36 67 00, FAX +46 455 820 12
EMAIL info@roxtec.com, www.roxtec.com